

ITEM	INSPECTION AND CHECKLIST
<b>1 Safety Brake</b>	<ol style="list-style-type: none"> <li>1. Check condition of brake pad on each arm.   <i>Replace pad if ...</i> <ul style="list-style-type: none"> <li>1.1 Torn</li> <li>1.2 Separated from Wedge</li> <li>1.3 Pieces of pad missing</li> </ul>   <i>Contact Galt Display Rack Co. for replacement.</i> <p><b>Do Not Use Arm until Safety Brake components have been replaced!</b></p> </li> <li>2. Thoroughly clean all dust, lint or debris from pad.</li> <li>3. Check condition of linkage, pins, end clips and engagement spring.</li> <li>4. Replace any damaged or missing components.</li> <li>5. Check linkage movements by slowly lifting arm and trolley assembly.</li> </ol>
<b>2 Cable</b>	<ol style="list-style-type: none"> <li>1. Lower each arm to its lowest position.</li> <li>2. Inspect the entire length of cable.   <i>Replace cable if ...</i> <ul style="list-style-type: none"> <li>2.1 Kinked</li> <li>2.2 Broken surface strands of wire</li> <li>2.3 Open strands of cable</li> </ul> <p><b>Do Not Use Arm Until Cable Has Been Replaced!</b></p> </li> </ol>
<b>3 Frame</b>	<ol style="list-style-type: none"> <li>1. Check all assembly bolts to ensure they are tight.</li> <li>2. Re-tighten any bolts found loose.</li> <li>3. Check anchor bolts in floor and tighten any loose anchor bolts.</li> </ol>
<b>4 Trolley/Arms</b>	<ol style="list-style-type: none"> <li>1. Inspect bolts and components on each trolley and arm assembly.</li> <li>2. Check for loose bolts or missing components.</li> <li>3. Tighten any bolts found loose and replace any missing components.</li> <li>4. Refer to parts list and contact Galt Display.</li> </ol>
<b>5 Safety Collars</b>	<ol style="list-style-type: none"> <li>1. Check locking collars are in place and set screws are tight.</li> <li>2. Tighten loose set screws and replace any missing collars.</li> </ol>


Failure to properly service and maintain your Electric Rug Gallery® on a regular basis will result in premature failure of the rack and/or component parts. Such failure could lead to injury to your employees or customers and/or damage to property.

**SERVICE CONTRACTS** are available for your Electric Rug Gallery®. For more information on these service contracts, please contact Galt Display Rack at 800-461-3892.

*for inquiries or assistance call:*

# 1.800.461.3892

# Electric Rug Gallery® Semi-Annual Maintenance Quick Reference and Location Guide

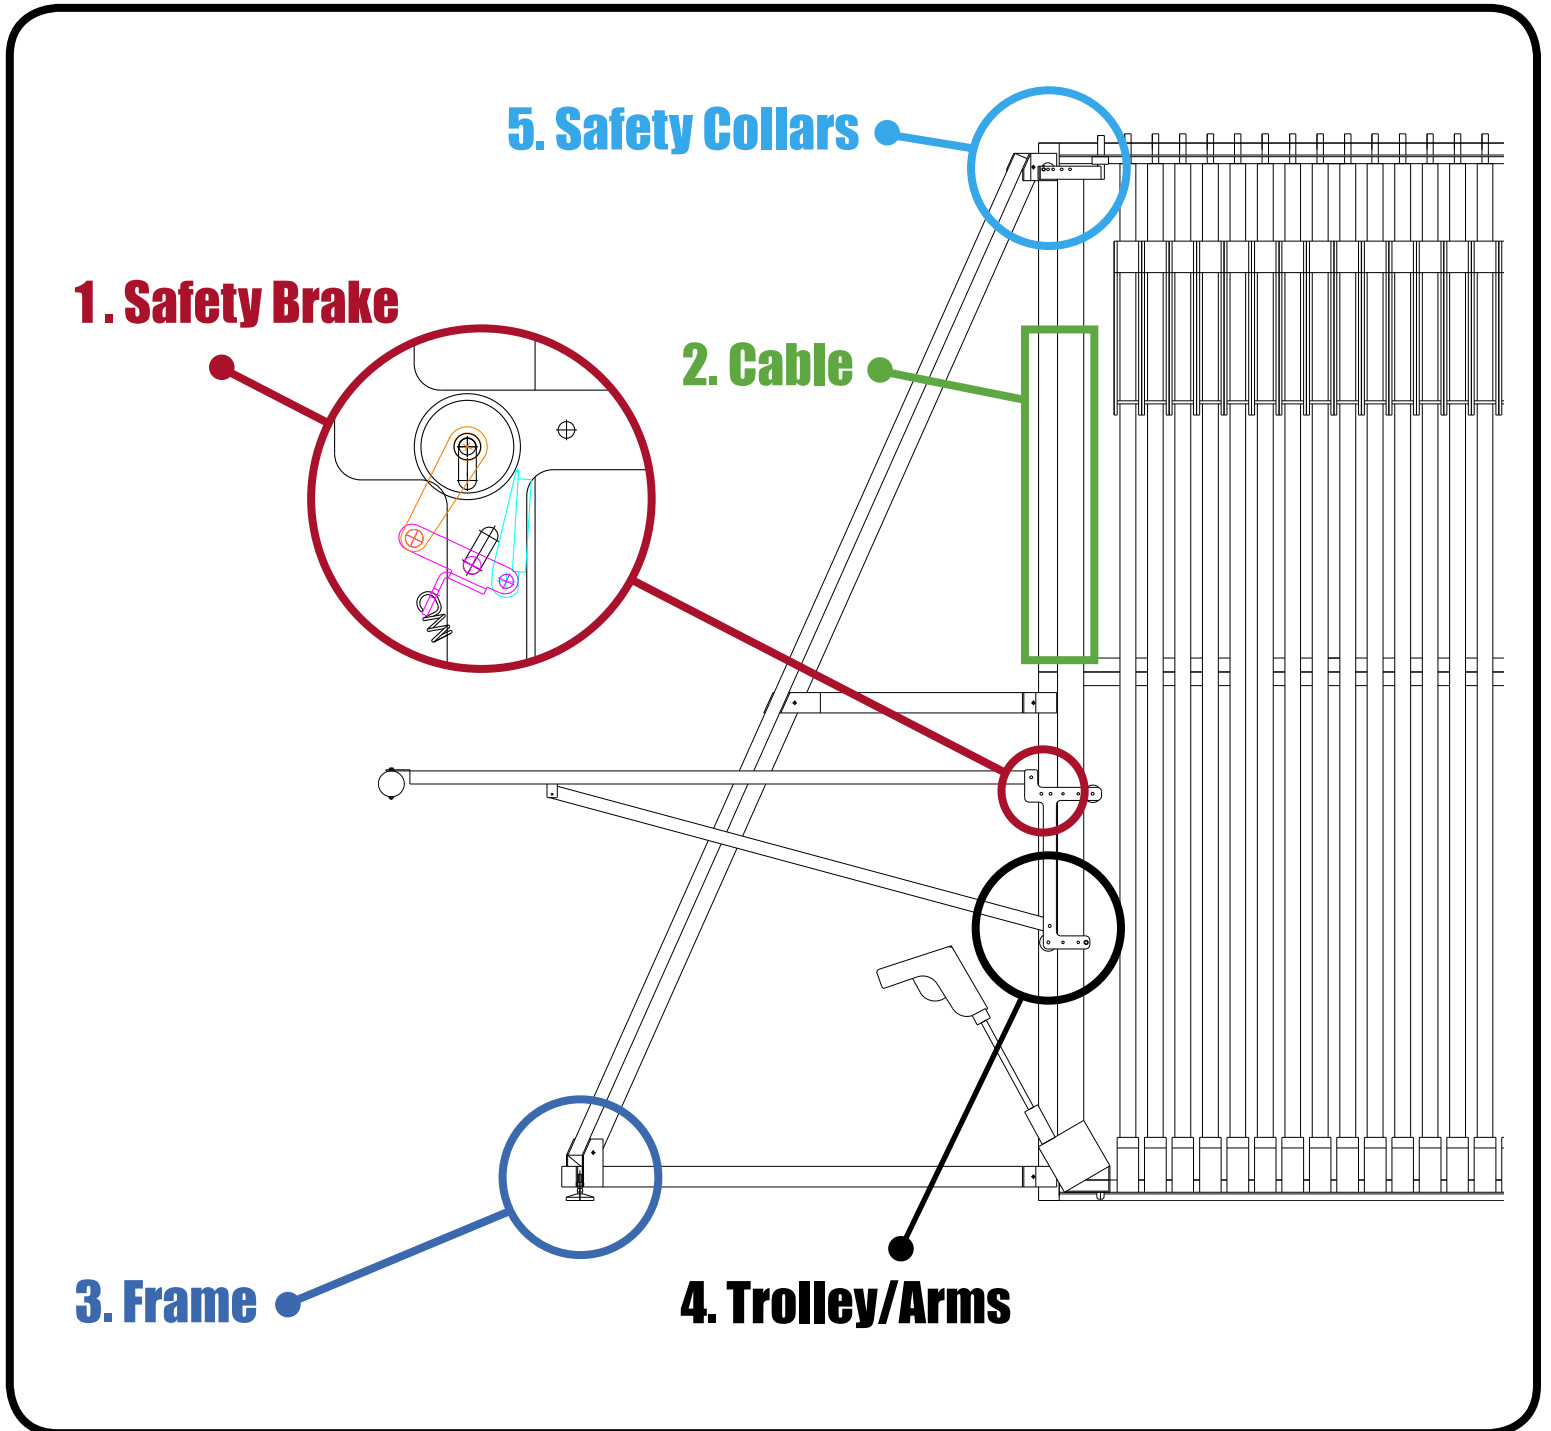

*for inquiries or assistance call 1-800-461-3892*