


ITEM	INSPECTION AND CHECKLIST
<p><b>1 Safety Brake</b></p>	<p>1. Check condition of brake pad on each arm.</p> <p><i>Replace pad if ...</i></p> <ul style="list-style-type: none"> <li>1.1 Torn</li> <li>1.2 Separated from Wedge</li> <li>1.3 Pieces of pad missing</li> </ul> <p><i>Contact Galt Display Rack Co. for replacement.</i></p> <p><b>Do Not Use Arm until Safety Brake components have been replaced!</b></p> <p>2. Thoroughly clean all dust, lint or debris from pad. 3. Check condition of linkage, pins, end clips and engagement spring. 4. Replace any damaged or missing components. 5. Check linkage movements by slowly lifting arm and trolley assembly.</p>
<p><b>2 Cable</b></p>	<p>1. Lower each arm to its lowest position. 2. Inspect the entire length of cable.</p> <p><i>Replace cable if ...</i></p> <ul style="list-style-type: none"> <li>2.1 Kinked</li> <li>2.2 Broken surface strands of wire</li> <li>2.3 Open strands of cable</li> </ul> <p><b>Do Not Use Arm Until Cable Has Been Replaced!</b></p>
<p><b>3 Frame</b></p>	<p>1. Check all assembly bolts to ensure they are tight. 2. Re-tighten any bolts found loose. 3. Check anchor bolts in floor and tighten any loose anchor bolts.</p>
<p><b>4 Trolley/Arms</b></p>	<p>1. Inspect bolts and components on each trolley and arm assembly. 2. Check for loose bolts or missing components. 3. Tighten any bolts found loose and replace any missing components. 4. Refer to parts list and contact Galt Display.</p>
<p><b>5 Safety Collars</b></p>	<p>1. Check locking collars are in place and set screws are tight. 2. Tighten loose set screws and replace any missing collars.</p>

Failure to properly service and maintain your Electric Rug Gallery® on a regular basis will result in premature failure of the rack and/or component parts. Such failure could lead to injury to your employees or customers and/or damage to property.

SERVICE CONTRACTS are available for your Electric Rug Gallery®. For more information on these service contracts, please contact Galt Display Rack at 800-461-3892.

for inquiries or assistance call: **1.800.461.3892**

# Electric Rug Gallery® Semi-Annual Maintenance Quick Reference and Location Guide

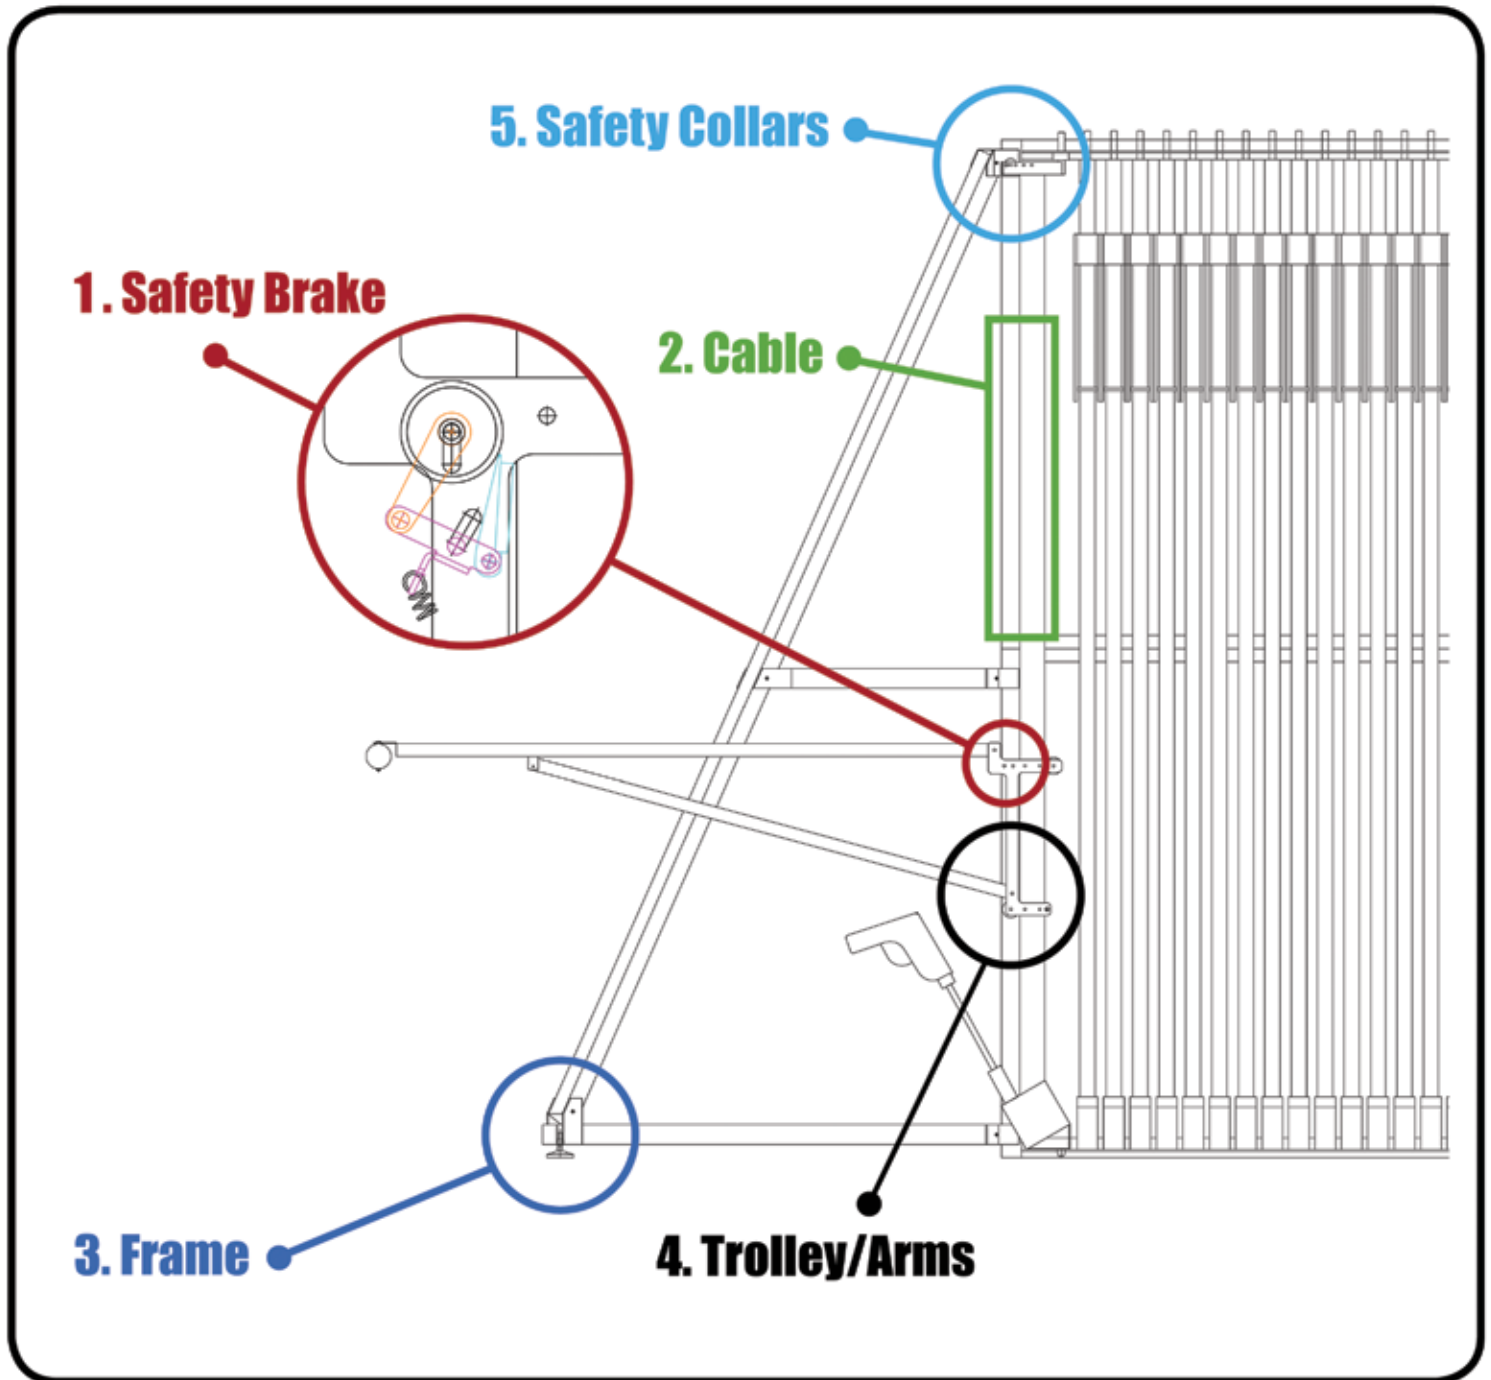

*for inquiries or assistance call 1-800-461-3892*